

USER MANUAL



DRY:SOON TOWEL WARMER


Model: 23358

Helpline No: 015394 88100

INTRODUCTION

Thank you for choosing the Dry:Soon Towel Warmer. With its quick heat up time, your towels will be warm and dry ready for the next use.

To get the best from your Dry:Soon Towel Warmer, please take a few moments to read these instructions, and keep them in a safe place for future reference.

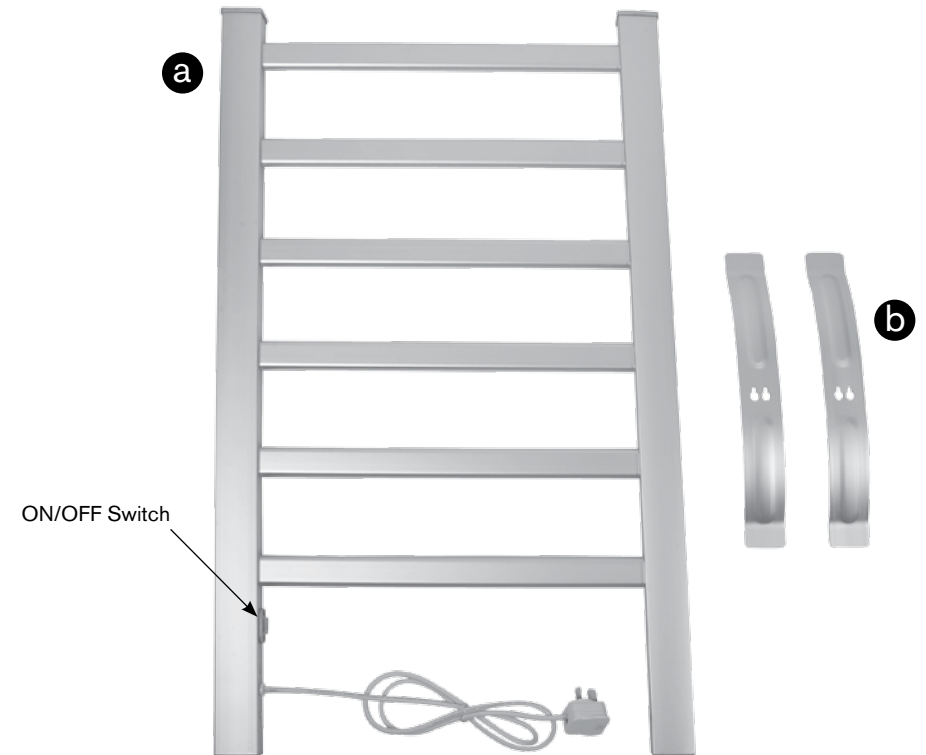

Parts

- a** 1 x heated piece
- b** 2 x Feet

TECHNICAL SPECIFICATIONS

Power consumption: 90W

Operating voltage: 230V

Maximum load 6kg


SAFETY PRECAUTIONS

When using this towel warmer, please follow these basic safety precautions.

1. Please read all instructions before using.
2. Make sure your electricity supply matches the voltage shown on the appliance.
3. The Towel Warmer is for household use only. It is not suitable for commercial use, or for use outdoors. It must only be used for its intended purpose.
4. To protect against electric shock, do not immerse the appliance, power cord or plug in water or any other liquid.
5. The appliance must be placed on a level, dry surface at least 1.5 metres away from heat or water sources.
6. Never pull or carry the Towel Warmer by its power cord. Do not allow the power cord to touch hot surfaces or sharp edges. Do not let it trail over the edges where it may be pulled by children or tripped over.
7. Always switch off and unplug the Towel Warmer after use, leaving it to cool down completely before storing it away. Do not wind the power cord around the towel warmer.
8. The appliance is not intended for use by children or infirm people unless they have been adequately supervised by a responsible person to ensure they can use it safely. Children should be supervised to ensure they do not play with the appliance.
9. Please do not use the appliance if it has been dropped or damaged in any way. Check the power cord regularly for signs of damage. Never attempt to repair the appliance or replace the cord yourself as this may lead to severe injury or electric shock. Call the helpline on 015394 88100 to arrange a replacement.

USING YOUR DRY:SOON TOWEL WARMER FOR THE FIRST TIME

Carefully unpack the Towel Warmer and remove any packaging. Place the unit on a level, dry surface ready for use.

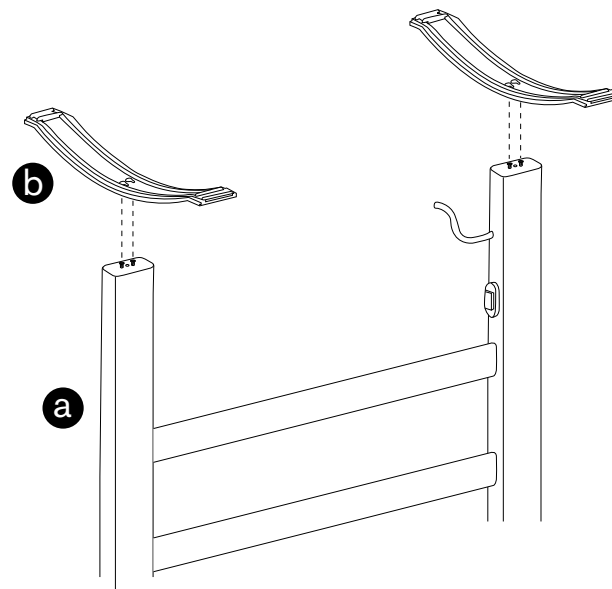

ASSEMBLY OF TOWEL WARMER

Slide the feet (part b) onto the bottom of the heated piece (part a), tightening the screws already present, to secure the feet in place.

TROUBLESHOOTING

Problem – the towel warmer is not heating up

Solution – check the towel warmer is plugged in and the on/off switch is illuminated.

RECYCLING YOUR ELECTRICALS

Along with many other high street retailers, Lakeland has joined a scheme whereby customers can take their unwanted electricals to recycling points set up around the country.

Visit www.recycle-more.co.uk to find your nearest recycling point.




ELECTRICAL CONNECTIONS

THIS APPLIANCE MUST BE EARTHED

This appliance is fitted with a fused three pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications. If the fitted plug is not suitable for your socket outlets, it should be cut off and carefully disposed of. To avoid an electric shock, do not insert the discarded plug into a socket.

FITTING A NEW PLUG

If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown here. The wires in the mains lead fitted to this appliance are coloured in accordance with the following code:

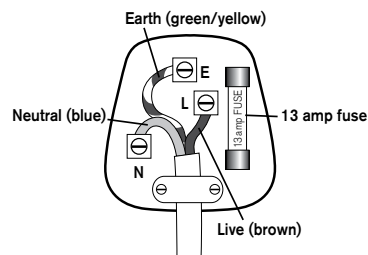

Connect BLUE to Neutral (N)

Connect GREEN & YELLOW to Earth (E)

Connect BROWN to Live (L)

13 amp fuse to be used

If the colours of the wires in the mains lead of this appliance do not correspond with the coloured markings identifying the terminals in your plug, proceed as follows. The wire which is coloured green and yellow **MUST** be connected to the terminal which is marked with the letter E (Earth) or coloured green. The wire which is coloured blue **MUST** be connected to the terminal which is marked with the letter N (Neutral) or coloured black. The wire which is coloured brown **MUST** be connected to the terminal which is marked with the letter L (Live) or coloured red.

Before refitting the plug cover, check that there are no cut or stray strands of wire inside the plug. Use a 13 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are at all unsure which plug or fuse to use, always refer to a qualified electrician.

Note: after replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop. This appliance complies with the following EEC Directives: 73/23 EEC (Low Voltage Directive) and 89/336 EEC (EMC Directive).

Lakeland

Alexandra Buildings, Windermere, Cumbria, UK LA23 1BQ

Tel: +44(0)15394 88100 www.lakeland.co.uk